

## **Sound Pressure Level Vs Distance**

Distance	dB
(cm)	drop
10	0
20	6.02
30	9.54
40	12.04
50	13.98
60	15.56
70	16.90
80	18.06
90	19.08
100	20.00

Sound pressure loss in free space (10 cm starting point reference)

The change in sound pressure can be calculated using the formula:

$$L_2 = L_1 - \left| 20 \times \log \left( \frac{r_1}{r_2} \right) \right|$$

Where  $L_2$  is the sound pressure level at the desired distance,  $L_1$  is the sound pressure level at the reference distance,  $r_2$  is the desired distance, and  $r_1$  is the reference distance.

For example, using a sound level of 78 at 10 cm as the reference and a desired distance of 30 cm, the equation would be:

$$L_2 = 78 - \left| 20 \times \log \left( \frac{10}{30} \right) \right|$$

$$L_2 = 78 - \left| 20 \times -0.477 \right|$$

$$L_2 = 78 - 9.54$$

$$L_2 = 68.46$$

So, the SPL at 30 cm would be 68.46 dB, with a drop of 9.54 dB.